

TROUBLESHOOTING GUIDE Release Notes

Product Line: DRS 24 and 25

Category: Heaters; Nozzle and Diffuser

PROBLEM	SOLUTION
No nozzle heat (DRS 24& 25)	 To determine whether a heater is good or not, check with a mulit-meter: Terminal 2 and 6 on heater 53.0 Ω +/- 5.0. Terminal 3 and 4 on heater should have continuity (thermocouple). If heater is bad replace. Check heater fuse continuity. Check for broken wires on the inside of the heater head harness cap. Click here for Nozzle Heater Test & Installation Instructions
	Click here for nozzle Heater Test & Installation instructions
No Diffuser heat (DRS24) One of the Heater plates will not heat	 To determine whether a heater is good or not, check with a mulit-meter: Test across the two power leads, 26.0 Ω +/- 5.0. Single Diffuser Heater, 16.0 Ω +/- 5.0. Test for continuity across the two thermocouple leads. Check heater fuse continuity. Replace heater as required. Click here for Diffuser Heater Test & Installation Instructions To determine whether the heater is good or not, check with a mulit-meter:
(DRS 25)	 Test across the two power leads, 23.0 Ω +/- 5.0. Test for continuity across the two thermocouple leads. Check heater fuse continuity. Replace thermocouple as required. Replace heater as required.
Drs 24 and 25 Nozzle Heaters part number	• 0024.90.116
Drs 24 Double Diffuser Heater Assembly	• 0024.22.042 (2000 watt)
Drs 24 Single Diffuser Heater Assembly	• 0024.22.047 (3500 watt)

Drs 24 and 25 Heater Head Harness	• 0024.02.187
 Drs 24 HED and 25 XLT Heater Head Harness 	• 0024.90.046
Drs 25 Heater plate	• 0025.01.044
•	•