

ONYX MICRO & STANDARD SITE CLEANING NOZZLE & CLEANING INSTRUCTIONS

Pin Vise (.05 - .125)

Cleaning Drill (.0225 dia.)

Cleaning Drill (.038 dia.) Cleaning Drill (.055 dia.)

Cleaning Drill (.086 dia.)

Cleaning Drill (.120 dia.)

Micro or Standard Tip

BE CAREFUL OF THREADS

Use STB7 brush to

clean inside tube of

collector assembly.

NOTE: Certain DRS models use this style tool, based on the serial number of the machine.

ltem

13

14

15

16

17

18

Part No

9008.99.984

9007.99.046

9007.99.264

9007.99.119

9003.00.100

9007.99.080

1015.11.068 Micro Nozzle

1015.11.067 Standard Nozzle






Description

1	1015.11.102	Nose
2	1015.11.057	Collector Assembly
3	1015.11.127	Micro Tip (.09 x .06)
3	1015.11.136	Micro Tip (.074 x .042)
3	1015.11.134	Micro Tip (.05 x .025)
4	9001.09.060	Vacuum Cup
5	1015.11.055	Collector Assembly
6	1015.11.121	Large Tip (.188 x .125)
6	1015.11.122	Medium Tip (.125 x .089
7	0001.11.101	Filter Element
8	1022.02.040	Nozzle Handling Tool
9	9008.99.982	Pliers
0	1015.11.113	Nozzle Stand
1	STB7	Brush
2	9008.99.983	Pin Vise (.004)

Micro & Standard Nozzle Kit 1015.11.012

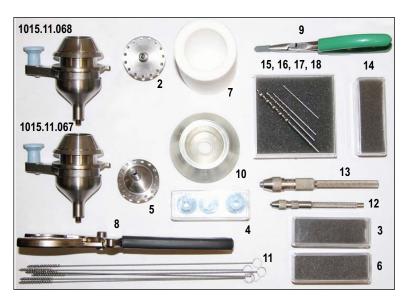

CLEANING INSTRUCTIONS


using nozzle handling tool and

place in nozzle stand when not

in use and prior to cleaning.

CAUTION: NOZZLE IS HOT DURING OPERATION, NOZZLE MUST BE COOL BEFORE DISASSEMBLY & CLEANING

Any solder accumulation on the flat surface can be scraped off.

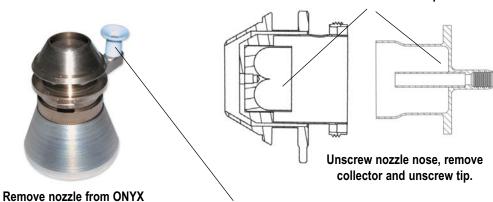

Check condition of vacuum cup for wear and tear - replace when required. Vacuum cup must provide adequate seal for auto height adjustment. Program should provide means to test.

TIP ID WILL REQUIRE CLEANING TO INSURE PROPER RESULTS.

- A pin vise and various drill sizes are supplied for cleaning
- Be careful to use the correct cleaning drill for each tip • Small micro tips are fragile. Broken tips will effect performance.

IT IS ADVISABLE TO HAVE SPARE TIPS

- · When tips require cleaning they should be removed, replaced with new spare tips and cleaned at the end of the day.
- The replacement tip must be fully engaged to the collector thread.



MICRO TIPS 1015.11.127 (.09 x .06) 1015.11.136 (.074 x .042) 1015.11.134 (.050 x .025)

9007.99.119 (.055 dia.) 9007.99.264 (.038 dia.) 9007.99.046 (.0225 dia.)

STANDARD TIPS 1015.11.121 (.188 x .125) 1015.11.122 (.125 x .089)

CLEANING DRILLS 9007.99.218 (.120 dia.) 9003.00.046 (.086 dia.)


5/12/10



ONYX STANDARD SITE CLEANING NOZZLE & CLEANING INSTRUCTIONS

NOTE: Certain DRS models use this style tool, based on the serial number of the machine.


1015.11.067 Standard Nozzle

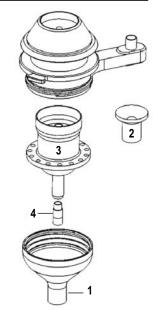

<u>Item</u> <u>Part No</u> <u>Description</u>

1 2 3 4 4 5 6 7	1015.11.102 9001.09.060 1015.11.055 1015.11.121 1015.11.122 0001.11.101 1022.02.040 9008.99.982	Nose Vacuum Cup Collector Assembly Large Tip (.188 x .125) Medium Tip (.125 x .089) Filter Element Nozzle Handling Tool
7 8	9008.99.982 1015.11.113	Pliers Nozzle Stand
9	STB7	Brush
10	9008.99.984	Pin Vise (.05125)
11	9003.00.100	Cleaning Drill (.086 dia.)
12	9007.99.080	Cleaning Drill (.120 dia.)

Standard Nozzle Kit 1015.11.015

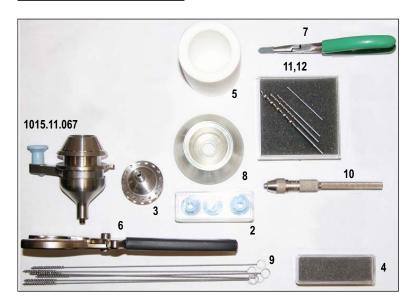


CLEANING INSTRUCTIONS

place in nozzle stand when not

in use and prior to cleaning.

CAUTION: NOZZLE IS HOT DURING OPERATION. NOZZLE MUST BE COOL BEFORE DISASSEMBLY & CLEANING

Any solder accumulation on the flat surface can be scraped off.

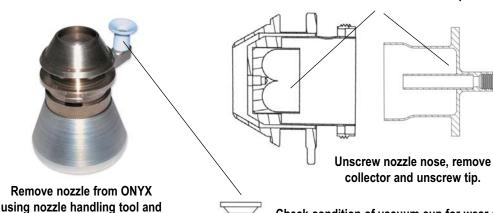


TIP ID WILL REQUIRE CLEANING TO INSURE PROPER RESULTS.

- A pin vise and various drill sizes are supplied for cleaning
- Be careful to use the correct cleaning drill for each tip
- Small micro tips are fragile. Broken tips will effect performance.

IT IS ADVISABLE TO HAVE SPARE TIPS

- When tips require cleaning they should be removed, replaced with new spare tips and cleaned at the end of the day.
- The replacement tip must be fully engaged to the collector thread.

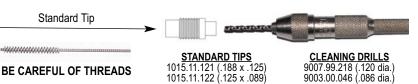

Use STB7 brush to clean inside tube of collector assembly.


Check condition of vacuum cup for wear and tear - replace when required. Vacuum cup must provide adequate seal for auto height adjustment. Program should provide means to test.



ONYX MICRO SITE CLEANING NOZZLE & CLEANING INSTRUCTIONS


NOTE: Certain DRS models use this style tool, based on the serial number of the machine.

1015.11.068 Micro Nozzle

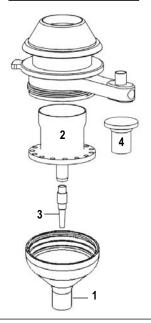

<u>Item</u>	Part No	<u>Description</u>
1 2 3 3 3 4 5 6 7 8 9 10 11 12 13	1015.11.102 1015.11.057 1015.11.127 1015.11.136 1015.11.134 9001.09.060 0001.11.101 1022.02.040 9008.99.982 1015.11.113 STB7 9008.99.983 9008.99.984 9007.99.046 9007.99.046	Nose Collector Assembly Micro Tip (.09 x .06) Micro Tip (.074 x .042) Micro Tip (.05 x .025) Vacuum Cup Filter Element Nozzle Handling Tool Pliers Nozzle Stand Brush Pin Vise (.004) Pin Vise (.05125) Cleaning Drill (.0225 dia.) Cleaning Drill (.038 dia.) Cleaning Drill (.055 dia.)
		- '

Micro Nozzle Kit 1015.11.014

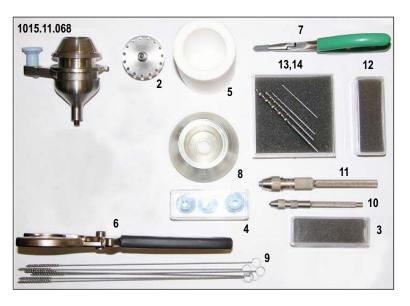

CLEANING INSTRUCTIONS


using nozzle handling tool and

place in nozzle stand when not

in use and prior to cleaning.

CAUTION: NOZZLE IS HOT DURING OPERATION. NOZZLE MUST BE COOL BEFORE DISASSEMBLY & CLEANING

Any solder accumulation on the flat surface can be scraped off.

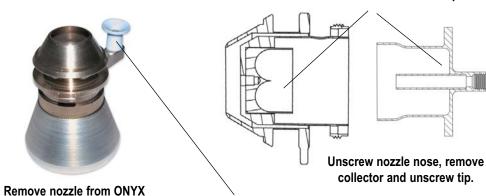


TIP ID WILL REQUIRE CLEANING TO INSURE PROPER RESULTS.

- A pin vise and various drill sizes are supplied for cleaning
- Be careful to use the correct cleaning drill for each tip
- Small micro tips are fragile. Broken tips will effect performance.

IT IS ADVISABLE TO HAVE SPARE TIPS

- When tips require cleaning they should be removed, replaced with new spare tips and cleaned at the end of the day.
- The replacement tip must be fully engaged to the collector thread.

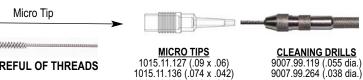

1015.11.134 (.050 x .025)

BE CAREFUL OF THREADS

Use STB7 brush to clean inside tube of collector assembly.

CLEANING DRILLS 9007.99.119 (.055 dia.)

9007.99.264 (.038 dia.) 9007.99.046 (.0225 dia.)

Check condition of vacuum cup for wear and tear - replace when required. Vacuum cup must provide adequate seal for auto height adjustment. Program should provide means to test.